

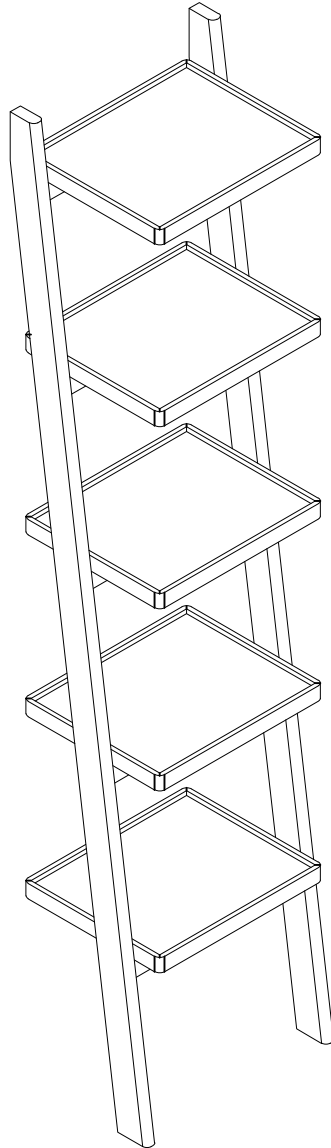


# ALTAR'D STATE

AS Product Name: CECE LEANING NRW NATURAL  
CECE NRW SHELF WARM BLACK  
CECE NARW SHELF CHESTNUT

AS Product Number: 1005016736  
1005017270  
1005017114

Assembled Dimensions: 79"H x 13"W x 18"L



**Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.**











PRODUCTS ARE NOT INTENDED  
FOR COMMERCIAL USE.

MADE IN VIETNAM

UPDATED: 03/2025

Page 1 of 6

Assemble in location for intended use.

Ltr.	Qty.	Hardware Included	
A	15	Flat Washer (Ø5/16*14*2mm)	
B	15	Lock Washer (Ø5/16*13*1mm)	
C	5	Bolt (Ø5/16*35mm)	
D	10	Bolt (Ø5/16*55mm)	
E	6	Bolt (Ø1/4*20mm)	
F	3	Metal plate (48*20*2mm)	
G	2	Metal plate "L" (41*15*2mm)	
H	2	Screws (#4*40mm)	
I	2	Screws (#4*15mm)	
J	2	Anchor (40mm)	

#### REQUIRED TOOLS:



Allen Key (Provided)

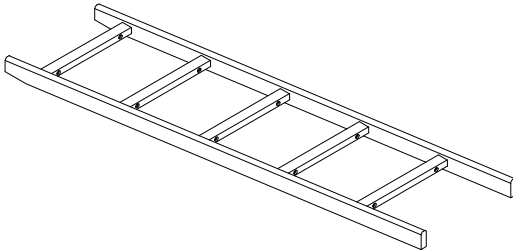







Screwdriver  
(Not Provided)

**-Two person assembly suggested.**

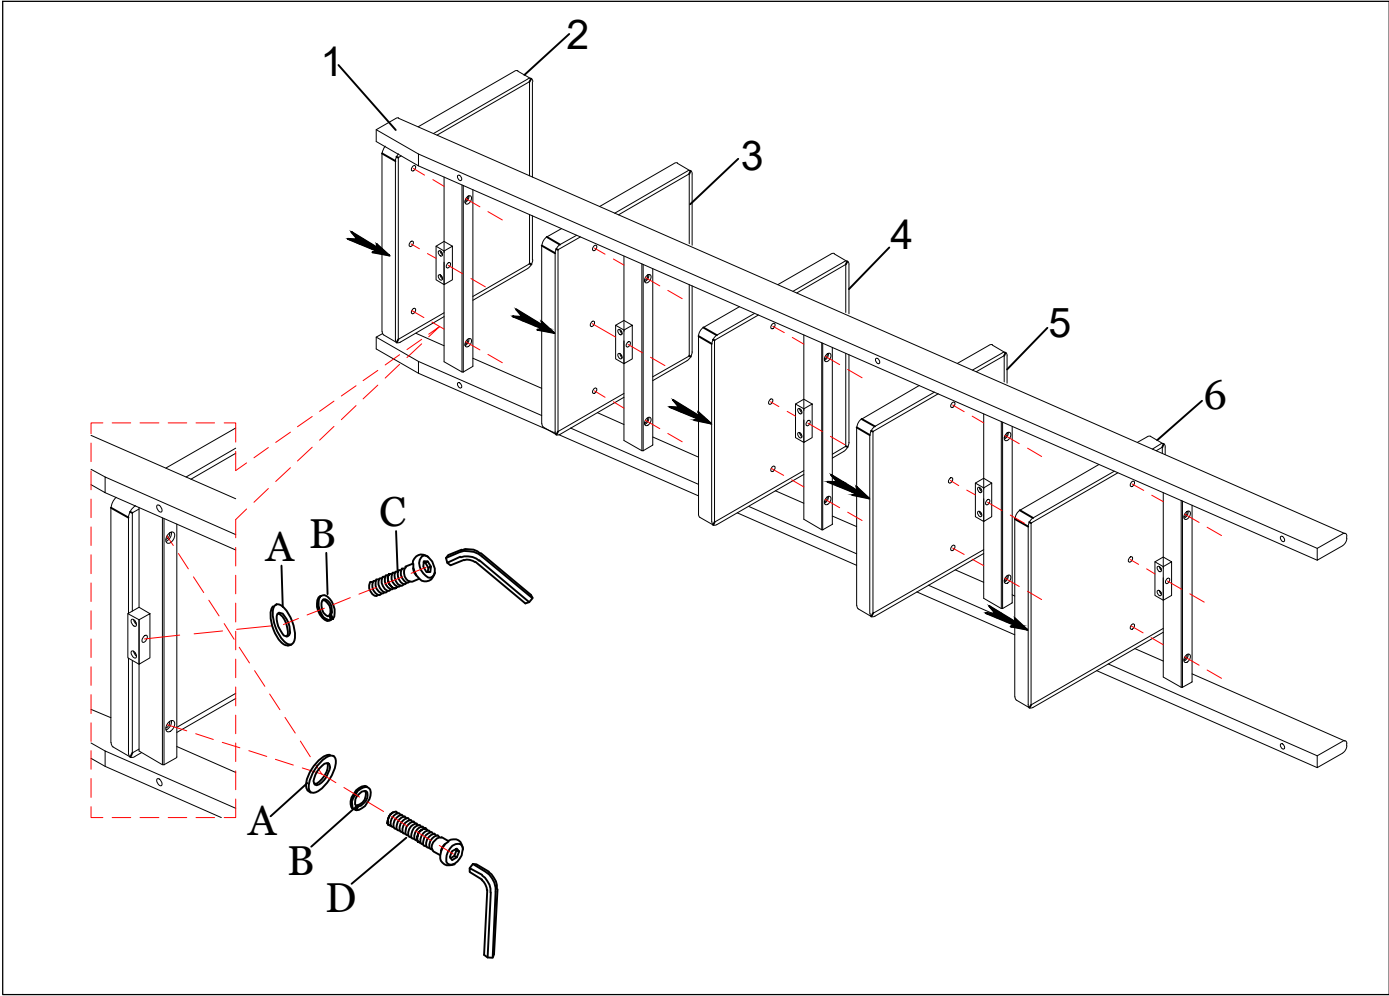
**Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.**

ASSEMBLY TIME: 15 minutes

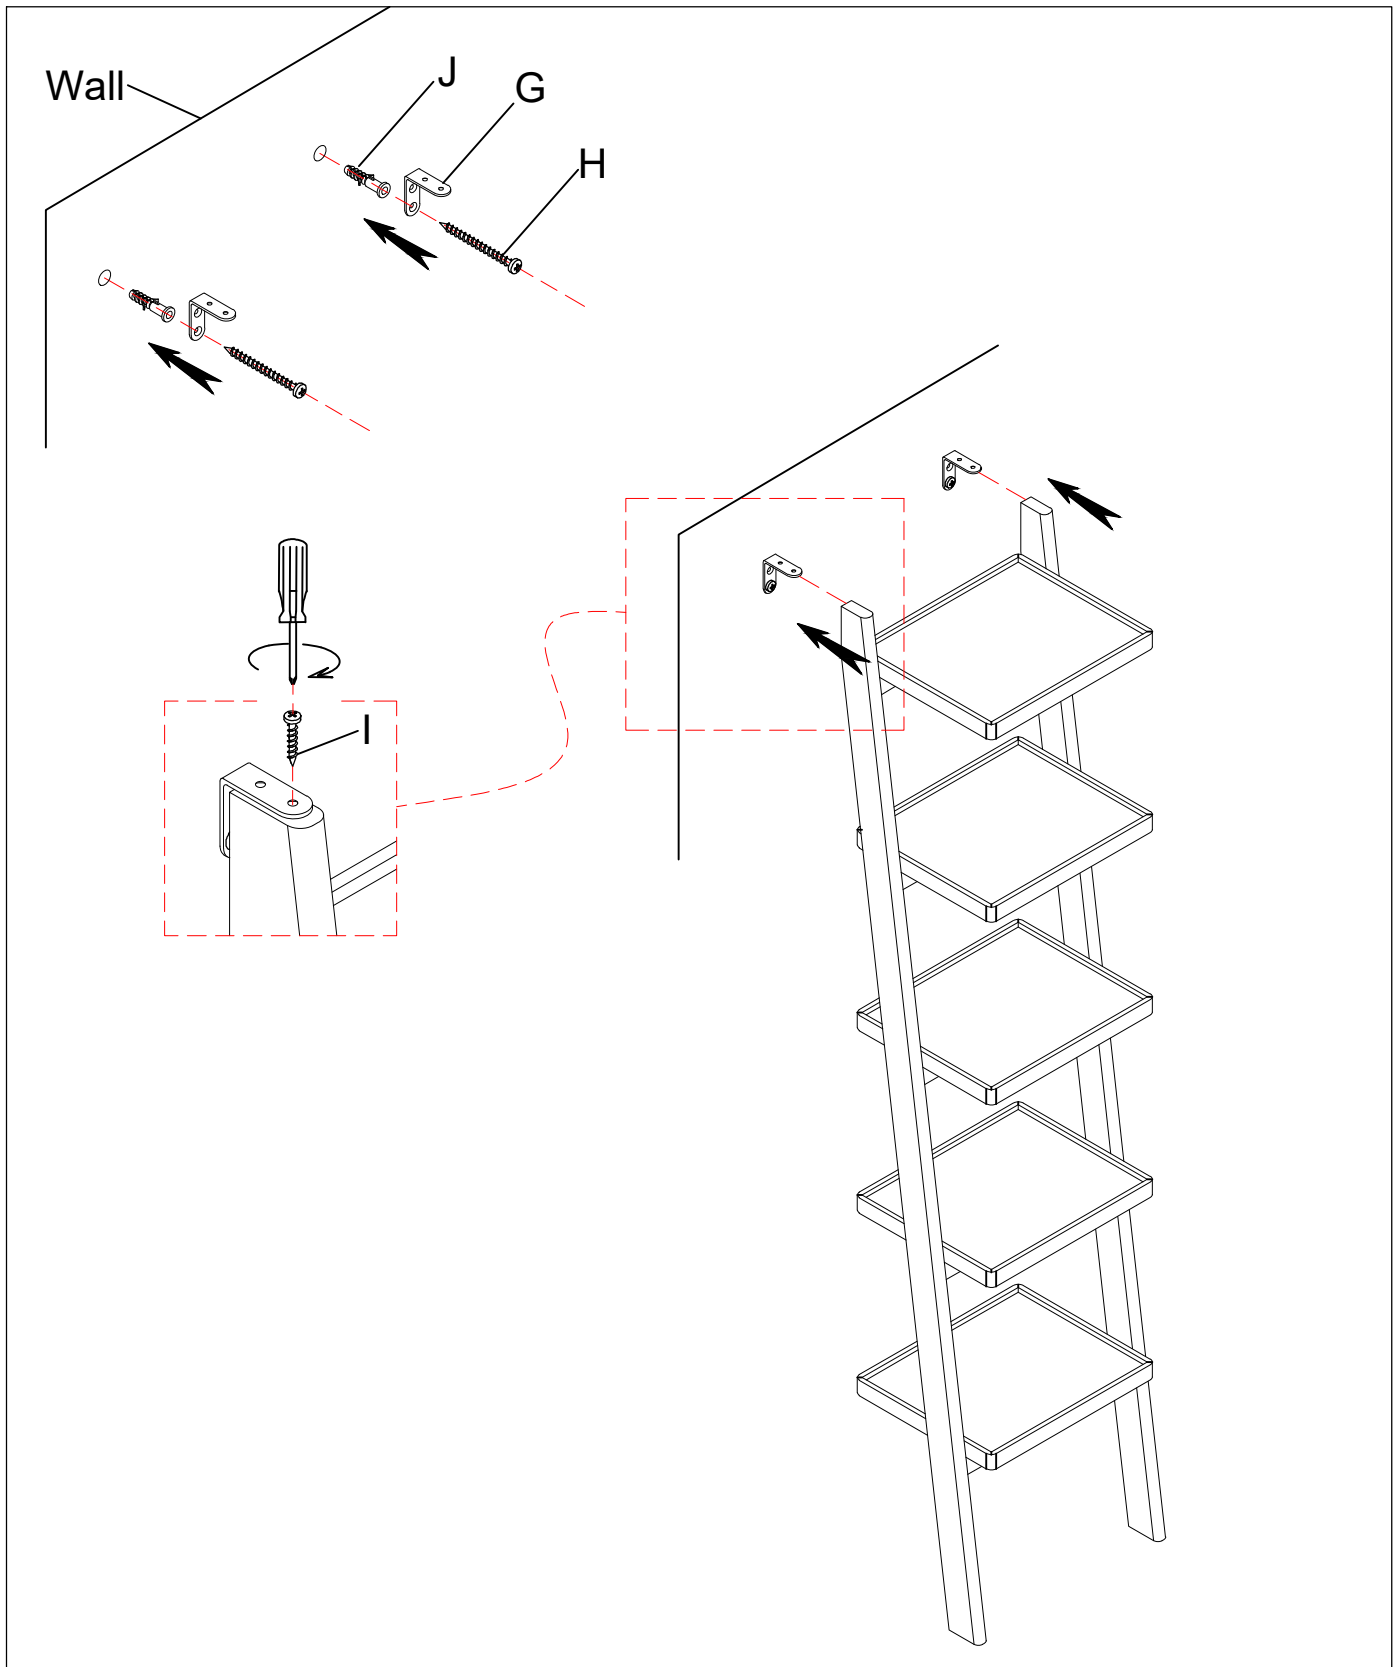
Ltr.	Qty.	Components
1	1	
2	1	
3	1	

Ltr.	Qty.	Components
4	1	
5	1	
6	1	

STEP 1: Attach Shelf (2),(3),(4),(5),(6) on the Frame shelf (1) by using Flat washer (A), Lock washer (B), Bolt (C) and Bolt (D) with Allen key.



STEP 2: Attach Anchor (J), Metal plate "L" (G), on the Wall by using Screws (H).  
Attach Shelf on the Metal plate "L" (G) by using Screws (I) .

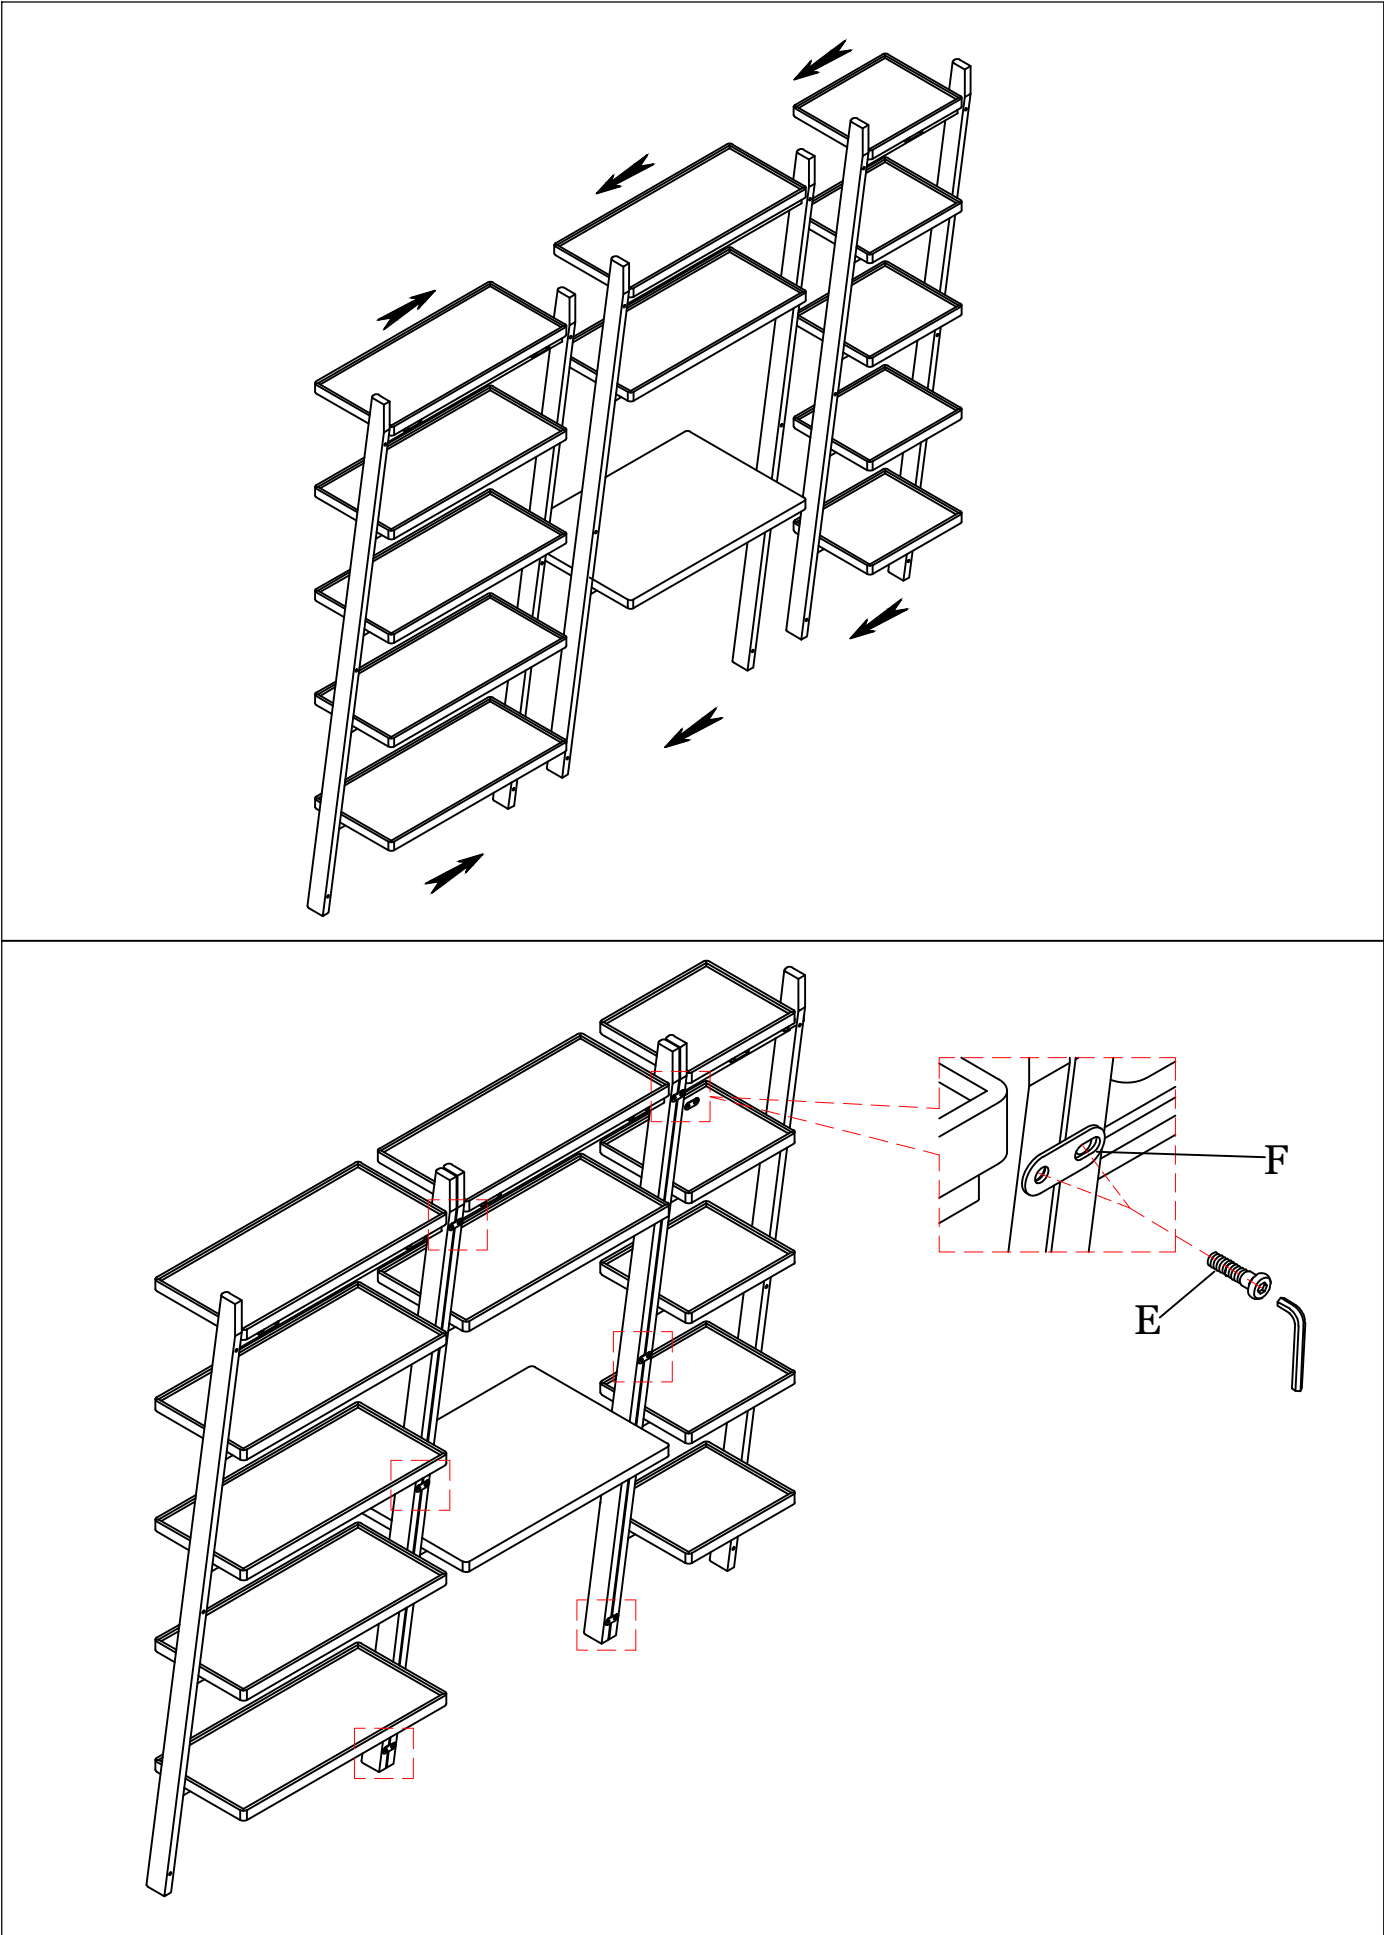


## CLEANING & CARE

Wipe with a soft, damp cloth. Avoid the use of harsh chemicals or abrasive cleaning materials.  
Mop up spills quickly with a soft, dry cloth.

If you want to use two items or more at the same time, please see the following steps.

STEP 1: Attach all Shelf together by using metal plate (F), Bolt (E) with Allen key.



STEP 2: Attach Anchor (J),Metal plate "L" (G), on the Wall by using Screws (H).  
Attach Shelf on the Metal plate "L" (G) by using Screws (I) .

