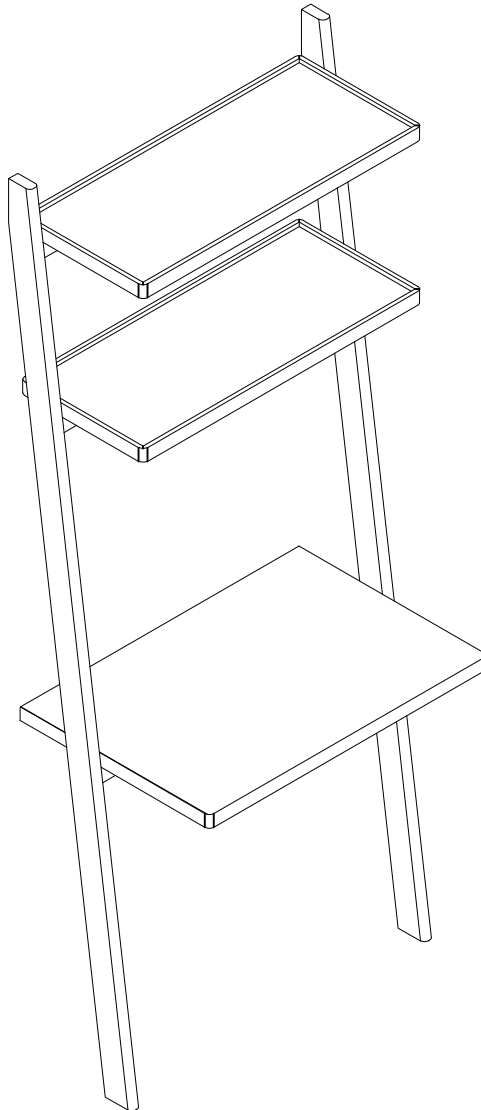


ALTAR'D STATE

AS Product Name: CECE LEANING DESK NATURAL
CECE WIDE DESK WARM BLACK
CECE WIDE DESK CHESTNUT

AS Product Number: 1005016785
1005017338
1005017130

Assembled Dimensions: 79"H x 20"W x 32"L



Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.











PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

MADE IN VIETNAM

UPDATED: 03/2025

Page 1 of 6

Assemble in location for intended use.

Ltr.	Qty.	Hardware Included	
A	12	Flat Washer (Ø5/16*14*2mm)	
B	12	Lock Washer (Ø5/16*13*1mm)	
C	6	Bolt (Ø5/16*35mm)	
D	6	Bolt (Ø5/16*55mm)	
E	6	Bolt (Ø1/4*20mm)	
F	3	Metal plate (48*20*2mm)	
G	2	Metal plate "L" (41*15*2mm)	
H	2	Screws (#4*40mm)	
I	2	Screws (#4*15mm)	
J	2	Anchor (40mm)	

REQUIRED TOOLS:



Allen Key (Provided)

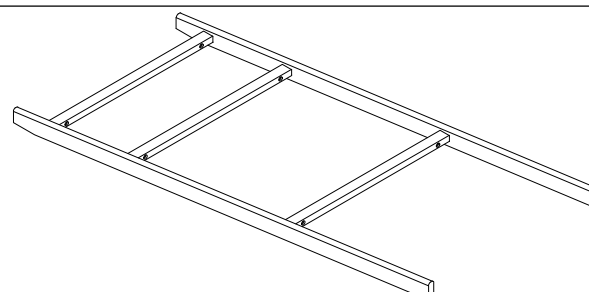
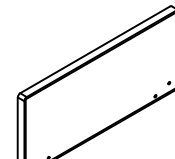
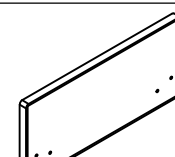


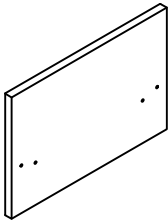
Screwdriver
(Not Provided)

-Two person assembly suggested.

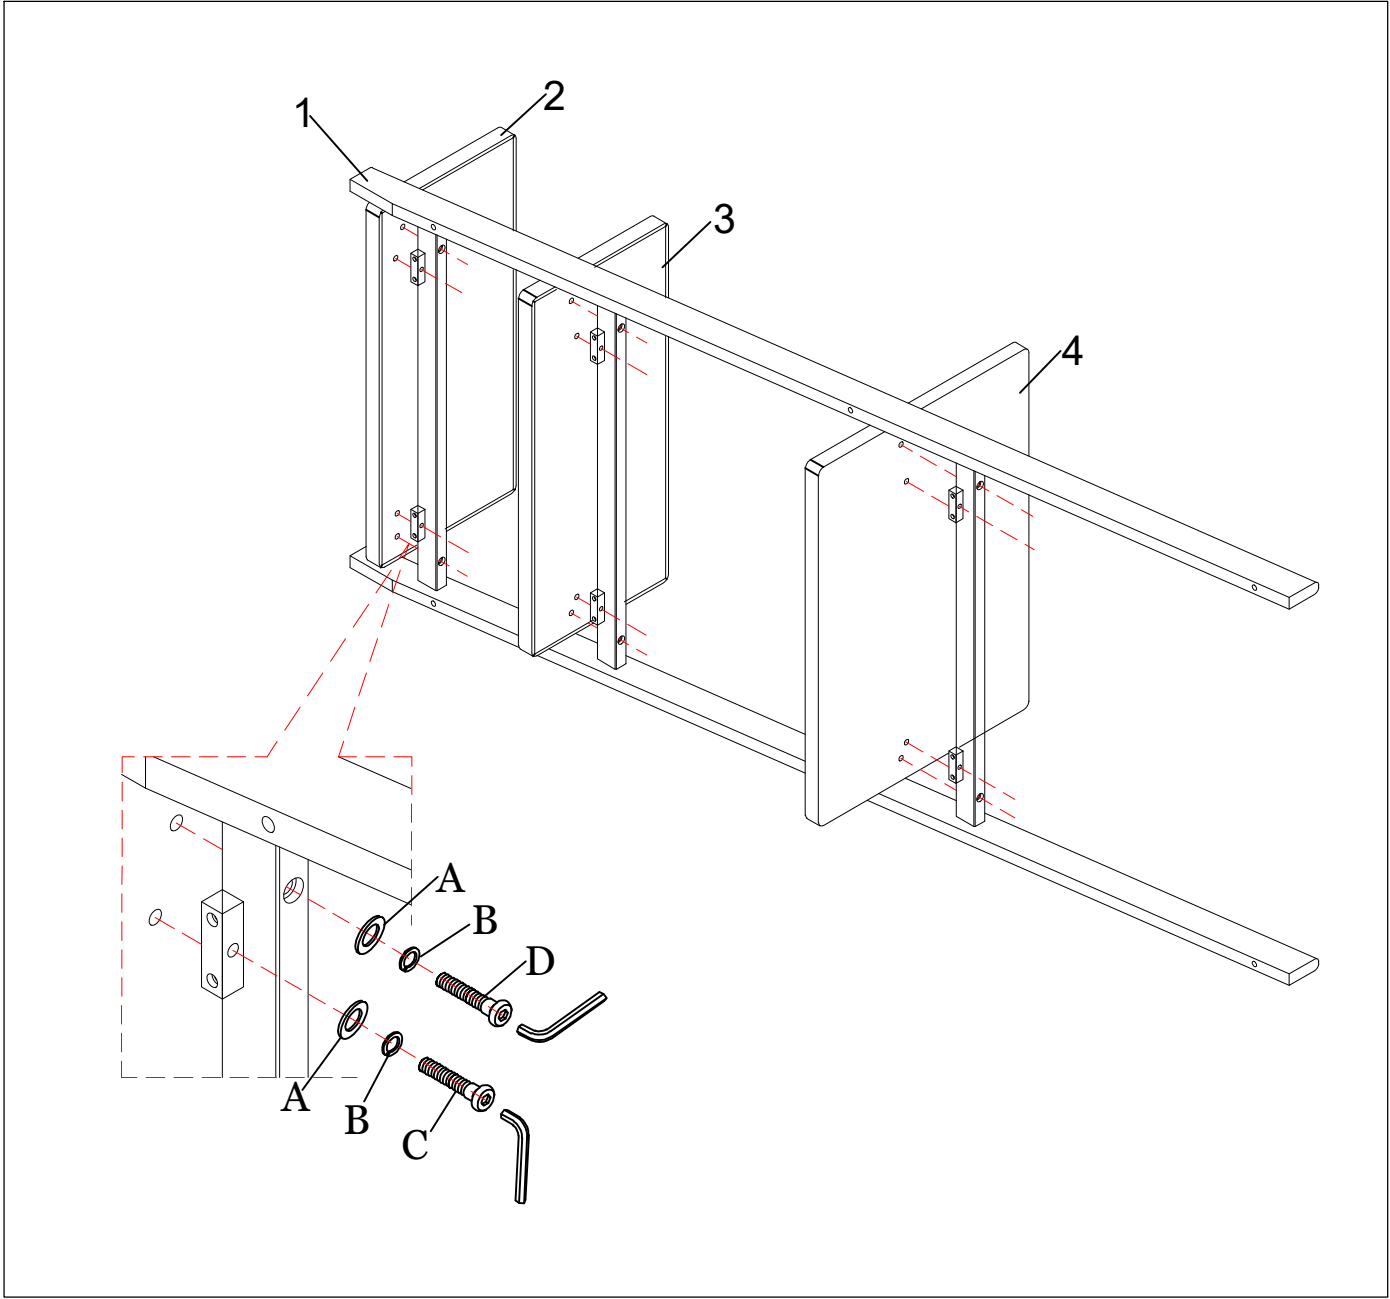
Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

ASSEMBLY TIME: 15 minutes

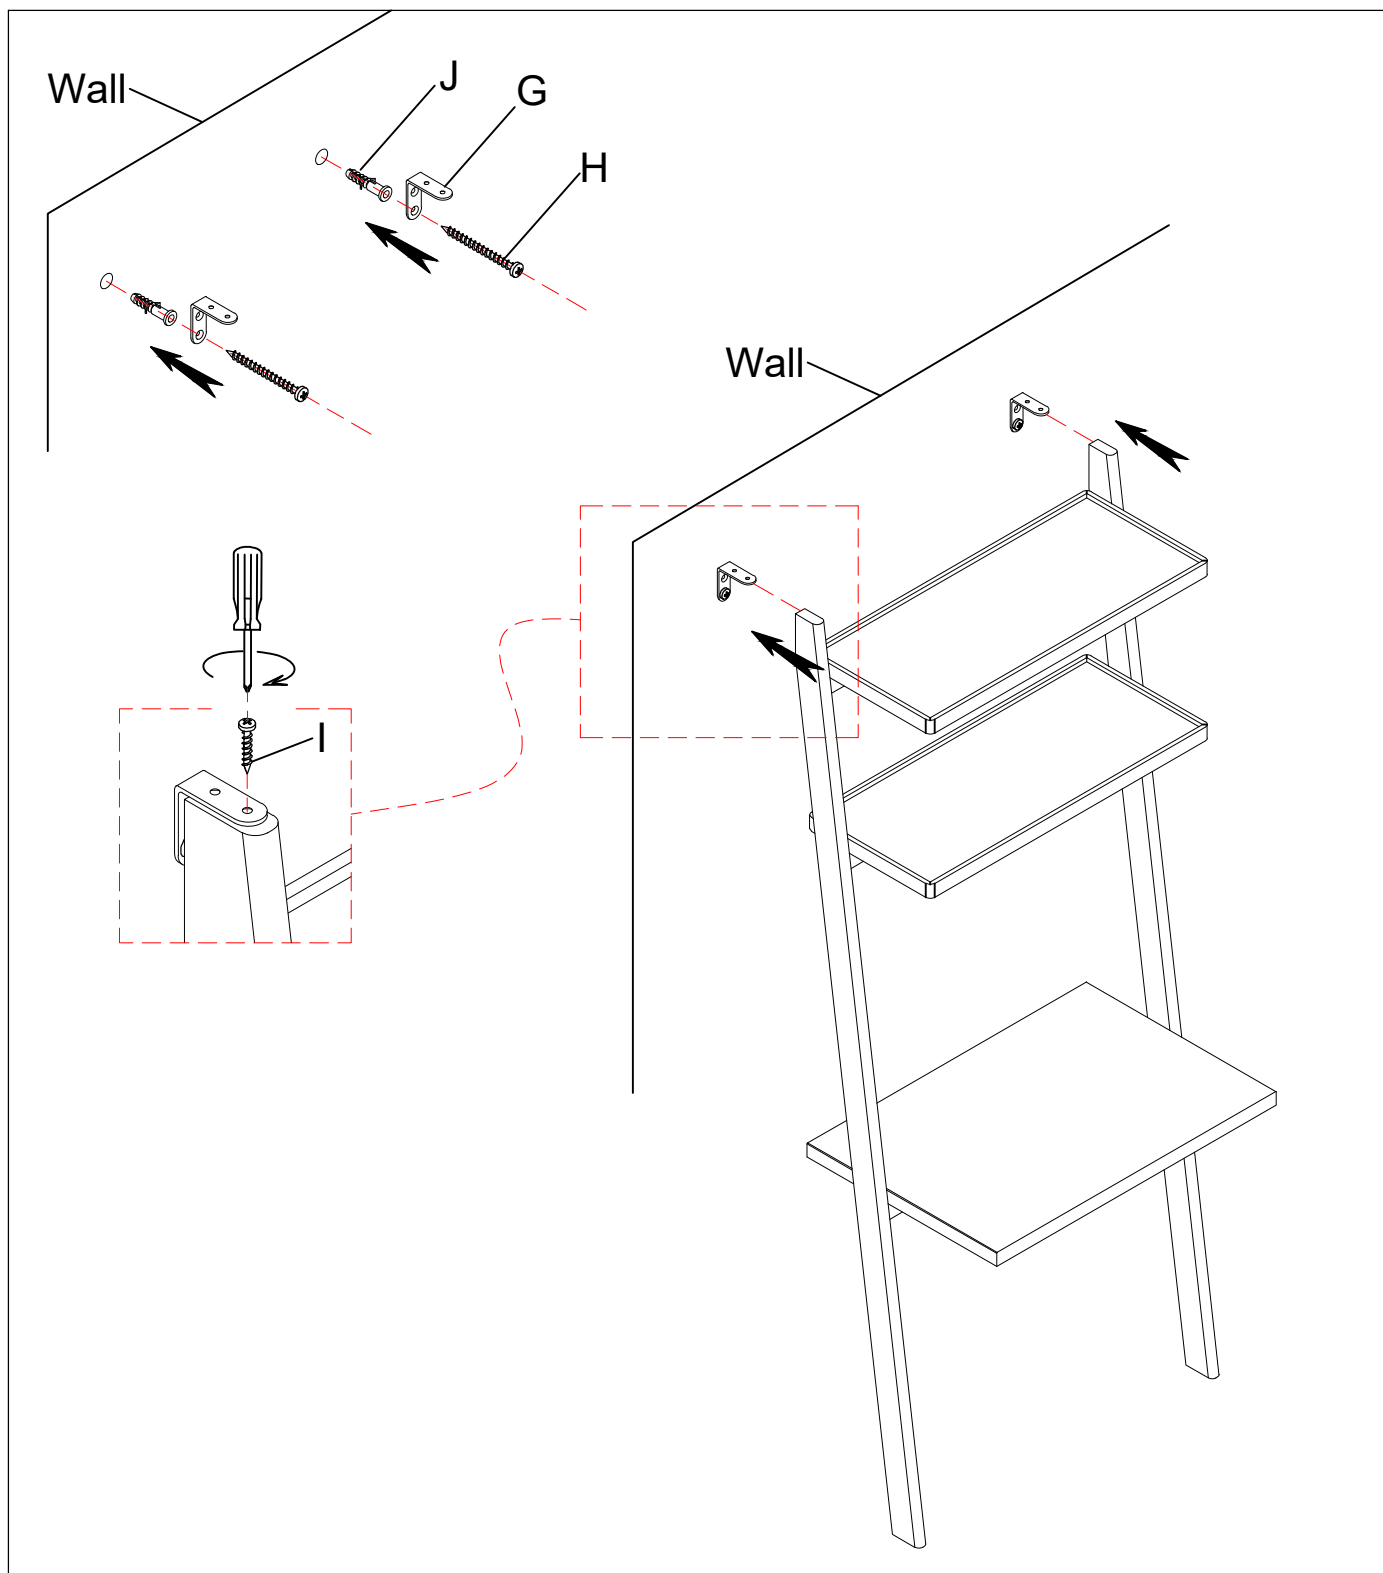
Ltr.	Qty.	Components
1	1	
2	1	
3	1	

Ltr.	Qty.	Components
4	1	

STEP 1: Attach Shelf (2),(3),(4) on the Frame shelf (1) by using Flat washer (A), Lock washer (B), Bolt (C) and Bolt (D) with Allen key.



STEP 1: Attach Anchor (J), Metal plate "L" (G), on the Wall by using Screws (H).
Attach Shelf on the Metal plate "L" (G) by using Screws (I) .

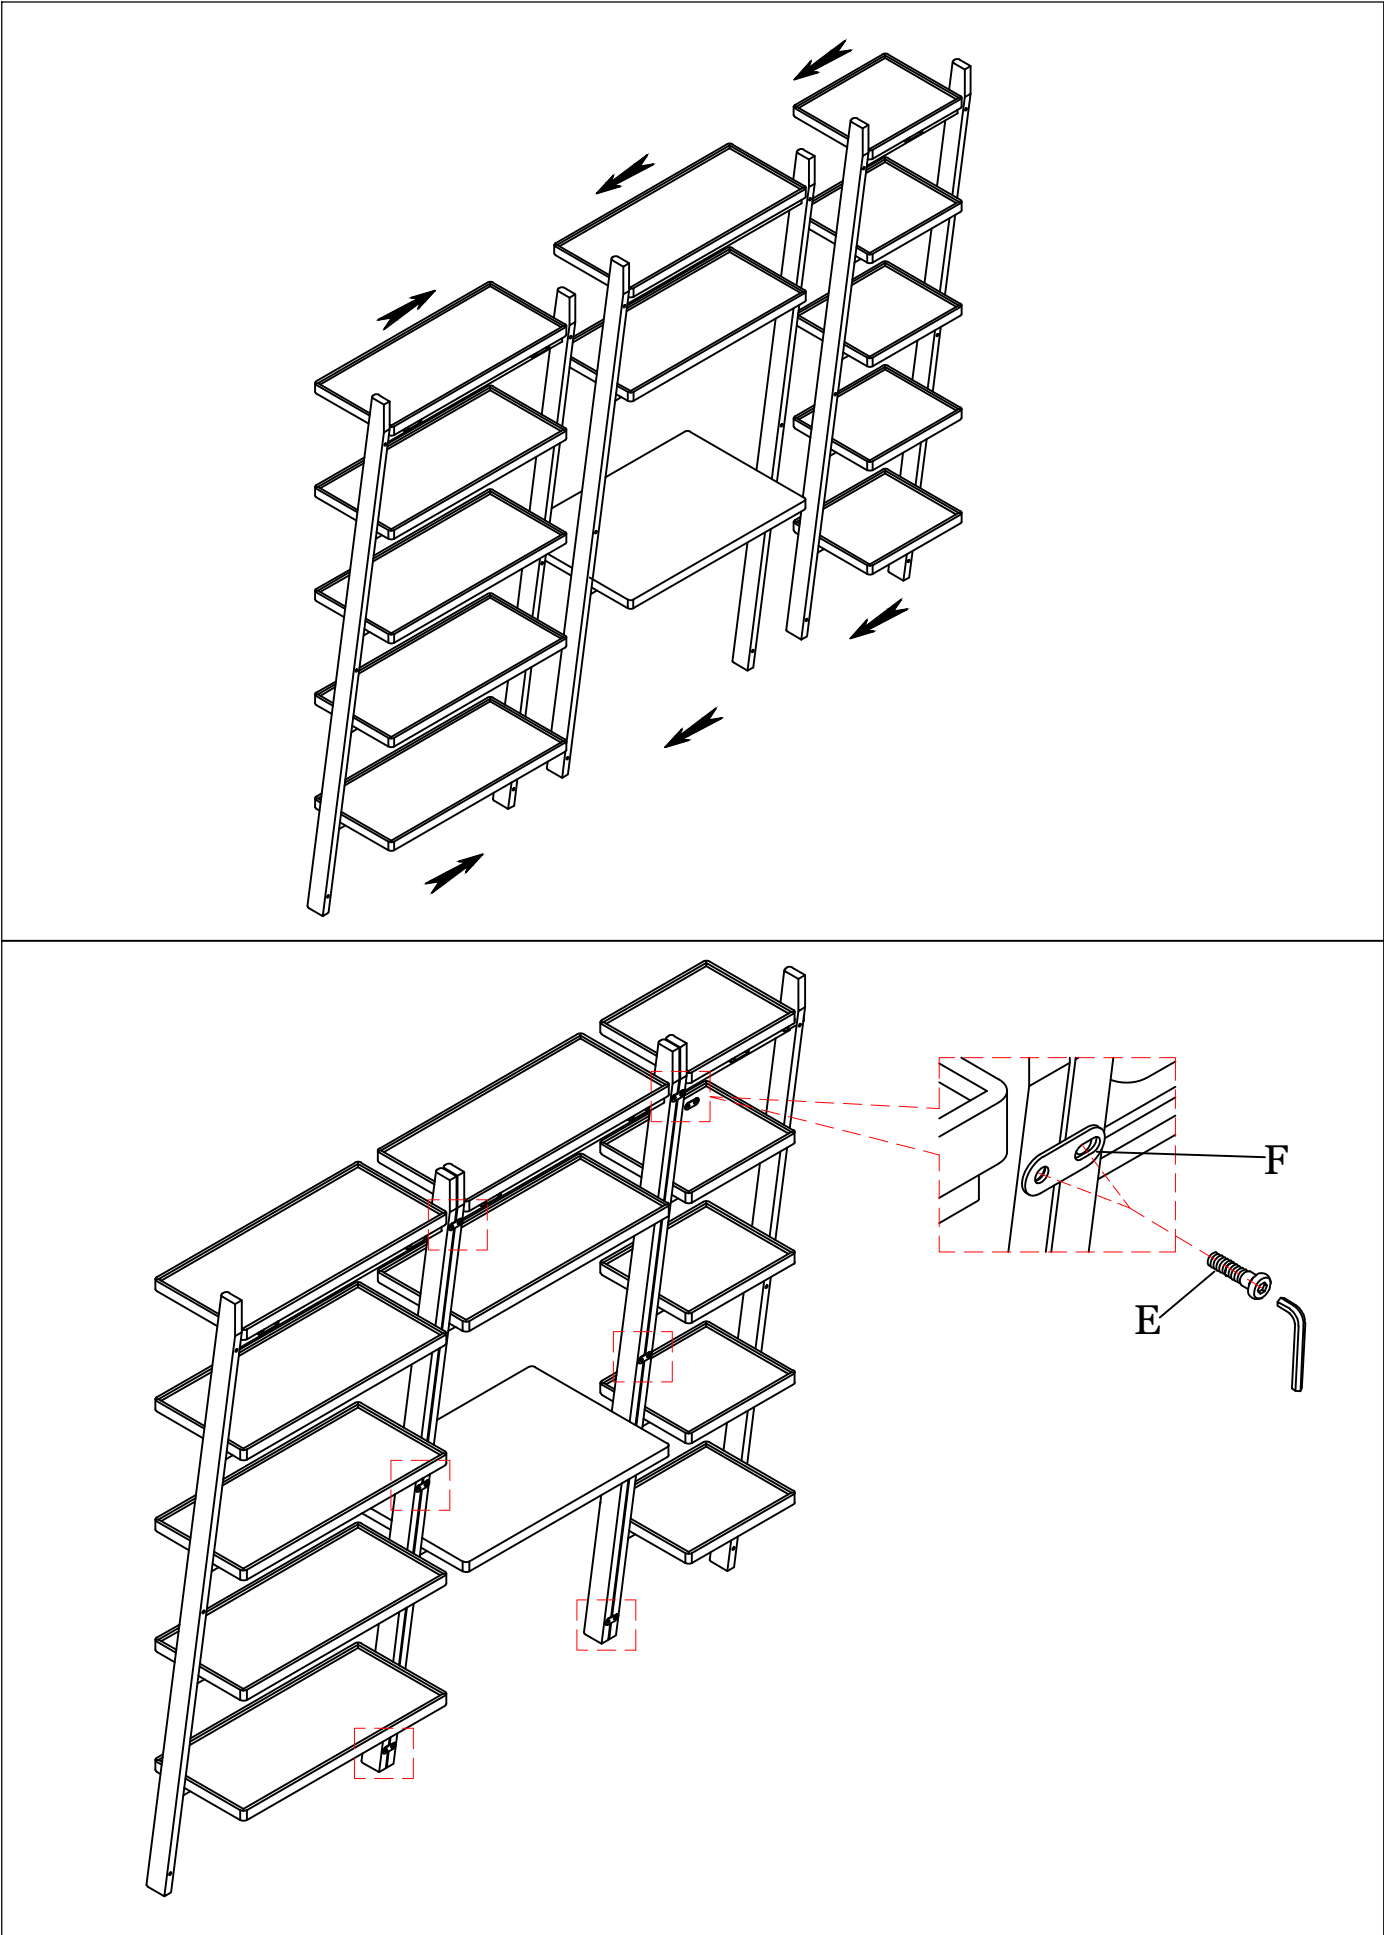


CLEANING & CARE

Wipe with a soft, damp cloth. Avoid the use of harsh chemicals or abrasive cleaning materials.
Mop up spills quickly with a soft, dry cloth.

If you want to use two items or more at the same time, please see the following steps.

STEP 1: Attach all Shelf together by using metal plate (F), Bolt (E) with Allen key.



STEP 2: Attach Anchor (J),Metal plate "L" (G), on the Wall by using Screws (H).
Attach Shelf on the Metal plate "L" (G) by using Screws (I) .

